

EX-ROLL




1 Open the back panel to unfold the telescopic pole.



2 Lift the pole into a vertical position and slide it towards the centre of the base.



3 Close the panel, ensuring the pole is positioned correctly.

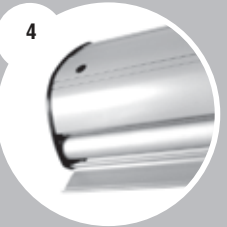


4 Open the front panel.




5 Pull the graphic up from the base.



6 Hang the top frame onto the hook.

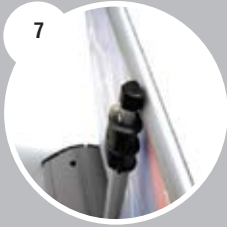

7 Open both clips and raise the pole to the desired height.

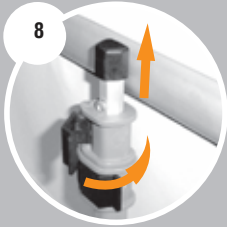

8 Close the clips to lock in place. Close the front panel on the base.



The ever popular roll-up banner has been innovatively re-engineered to create the dynamic Ex-Roll. The attached telescopic pole and unique fold-away system mean there are no loose parts!

Ex-Rolls are available double or single sided and the images are printed on non-curling material to present a consistently flat image. The images are easily interchangeable offering good value over time.

X-LARGE	▲ var - 2.5 m (8' 2")	▲ var - 2.2 m (7' 3")
	▶ 1.5 m (4' 11")	▶ 1.2 m (3' 11")
	■ 8.37 kg (18.4 lb)	■ 7.4 kg (16.3 lb)
MEDIUM	▲ var - 2.1 m (6' 11")	▲ var - 1.9 m (6' 3")
	▶ 1 m (3' 3")	▶ 0.85 m (2' 10")
	■ 6.07 kg (13.4 lb)	■ 5.0 kg (11 lb)

